


HANGING INSTRUCTIONS

ZAMBAITI CONTRACT

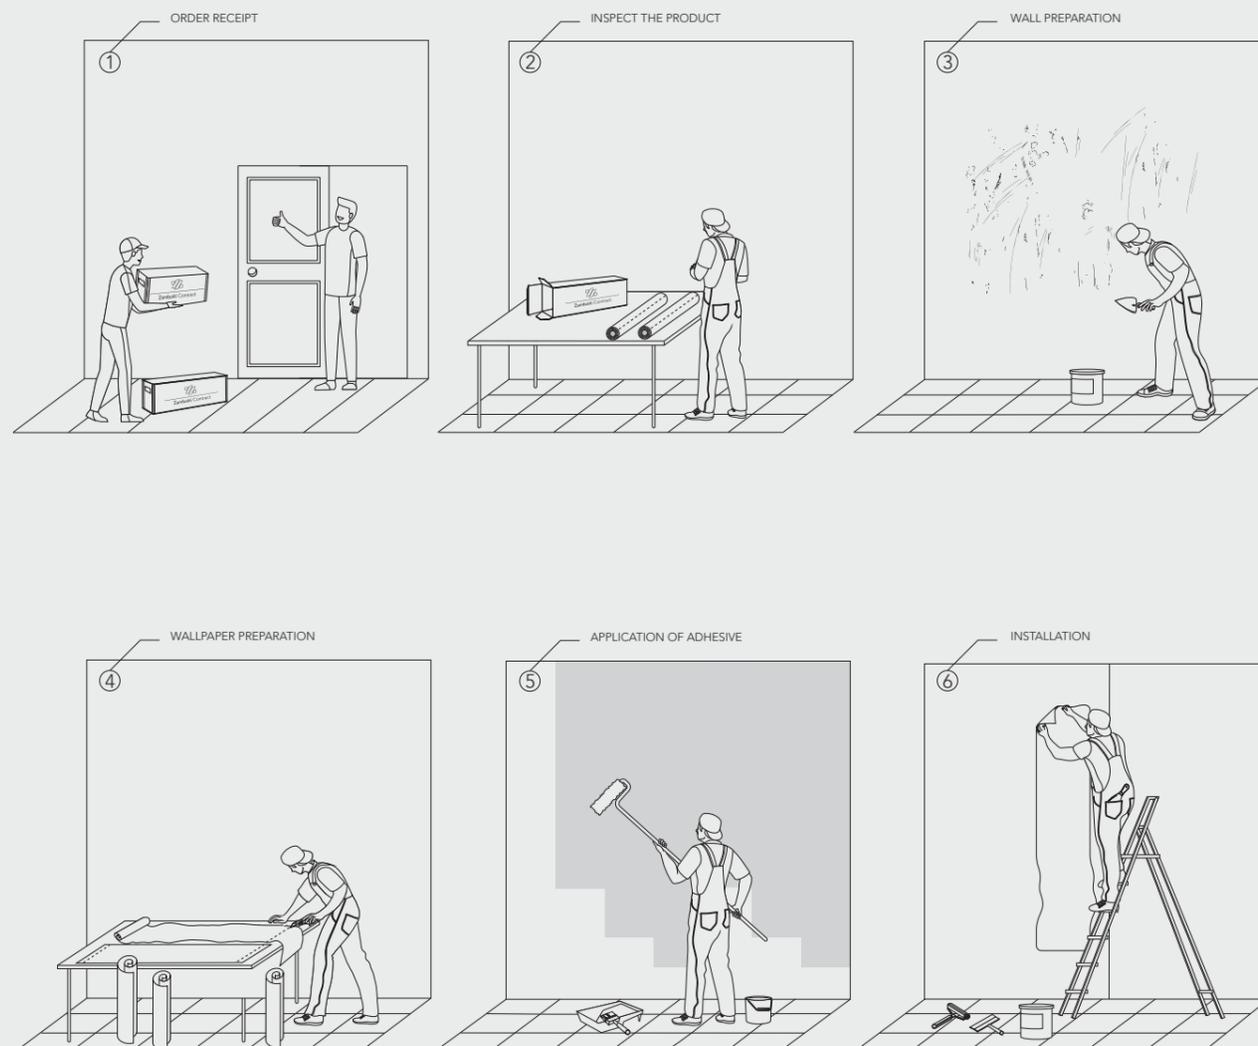

1. DELIVERY OF MATERIAL.

2. INSPECT THE PRODUCT.

- Before applying the wallpaper on the wall, make sure all rolls are sealed, clean and without visible faults. The batch number has to be the same for all the rolls. The material should be inspected for defects after 3 drops have been applied: if found defective, no claims will be allowed for more than 3 strips installed. The application of the product on the wall represents the acceptance of the wallcovering's quality under the terms of purchase. Due to the different production times, it is not possible to grant absolute color match between the swatches presented in the sample book and the product delivered.

3. WALL PREPARATION.

- Preparing the walls is extremely important to obtain an excellent result: make sure walls are dry and clean and the surface is even and smooth before applying the strips. Fix the larger holes with a filler, then sandpaper so it doesn't cause a bump under the strip. In case of painted walls, wipe to remove any kind of grease. Sand the wall if it has a smooth finishing. Never apply wallpaper on freshly coated walls or in case coating is incomplete or damaged.

4. WALLPAPER PREPARATION.

- Digital print murals are supplied in multiple panel roll sets in order to fit the desired wall. Each panel comes with some excess material at the top and bottom to allow a correct installation. Prior to application, unroll the panels on the floor and ensure they match exactly to create the mural, then number in sequence and prepare them for hanging in the correct order. Place each panel on a pasting table, make a mark on the back top end where it needs to be cut and with the help of a metal ruler proceed to cut with a sharp blade. Once hung, trim the bottom to measure.

- Wallpapers are supplied in rolls, each 10 m long. Unroll on a work table, then mark the back top end with a pencil where it needs to be cut, allowing about 3 cm extra at the bottom. Number each strip on the back and proceed with installation in the same order.

5. APPLICATION OF ADHESIVE.

- Spread the glue evenly on the wall with the help of a roller. Use a clear, pre-mixed vinyl adhesive and follow the manufacturer's instructions, respecting the times mentioned for a correct application. Make sure the adhesive coating is even on all the surface to be covered, so as to ensure the wallpaper will adhere correctly. It is important to avoid using excessive glue as it may stain the face of the wallcovering.

6. INSTALLATION.

Install the strips respecting the sequence assigned earlier. Before starting draw a vertical line on the wall with the help of a plumb line to ensure it is level, then apply the strips from the top to the bottom. Make sure the design match is followed. Use a soft sponge or cloth and press lightly to make the wallpaper adhere correctly. Trim the excess material at the bottom of the wall using a sharp blade.